


IB 350

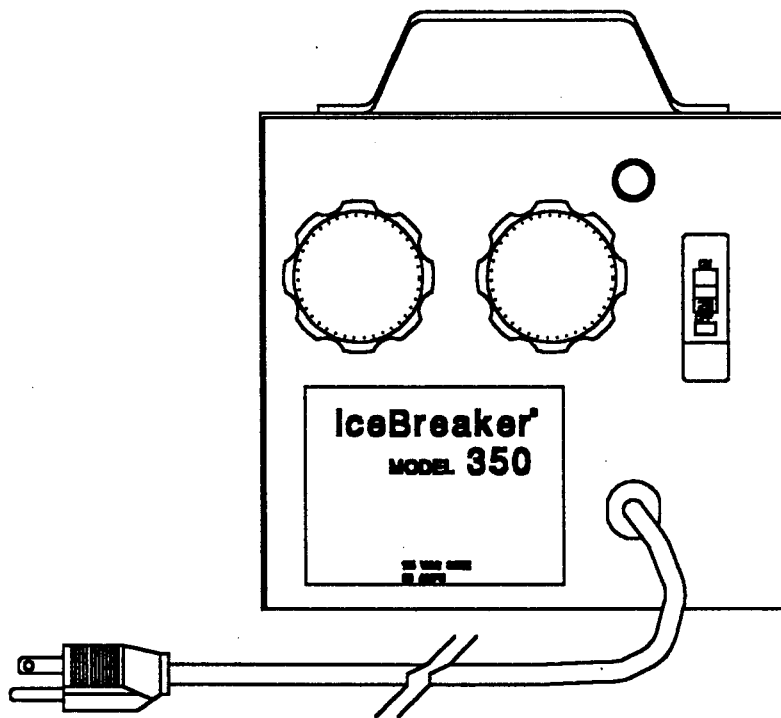

SERVICE MANUAL

FOR
MODELS MANUFACTURED AFTER 1/1/91

CONTENTS

VIEW	DESCRIPTION	PAGE
FIGURE 1	SCHEMATIC DIAGRAM	3
FIGURE A	FRONT VIEW	4
.....	PARTS LIST	5
FIGURE B	RIGHT SIDE VIEW & INTERNAL COMPONENTS.....	6
.....	PARTS LIST	7

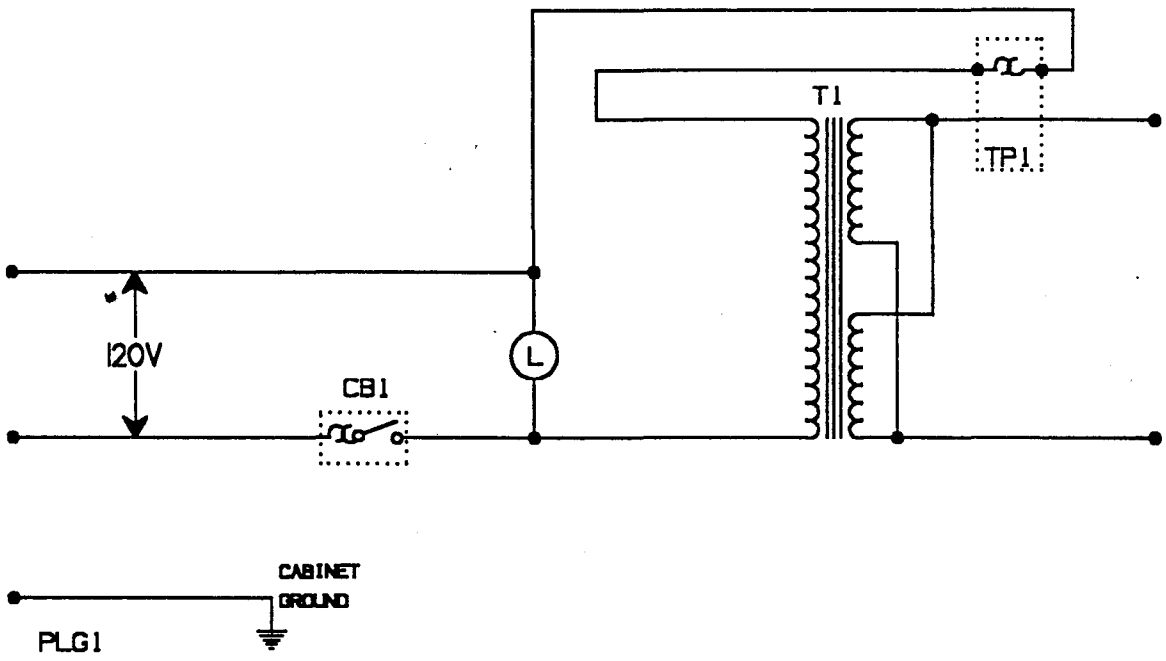


FIGURE 1 - SCHEMATIC DIAGRAM

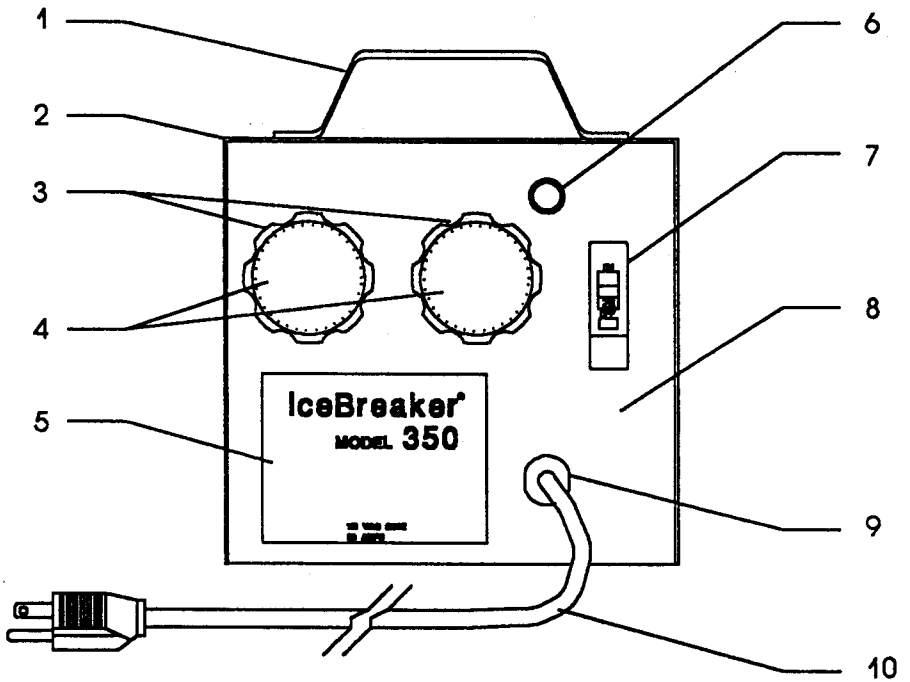


FIGURE A - FRONT VIEW

TEM NO.	DIA. MKGS.	PART NO.	DESCRIPTION	QTY.
1		HG-180A	HANDLE	1
2		IB-303	COVER	1
		LB-1201	LABEL, WARNING	1
3		MI-246	WELD CONNECTOR	2
		FW-72	NUT, CONNECTOR	2
		HW-38SW	WASHER, SPRING	2
			NUT, HEX (HW-3816SHN)	2
4		MI-440	KNOB, TERMINAL	2
5		LB-1150	LABEL, MODEL	1
6	L	FM-184	LAMP, INDICATOR	1
7	CB1	PH-06S	CIRCUIT BREAKER, 20 AMP, CONVENTIONAL SWITCH STYLE	1
8		IB-302	BASE	1
9		PH-10	STRAIN RELIEF	1
10	PLG1	PH-09-15	CORD SET, 15'	1

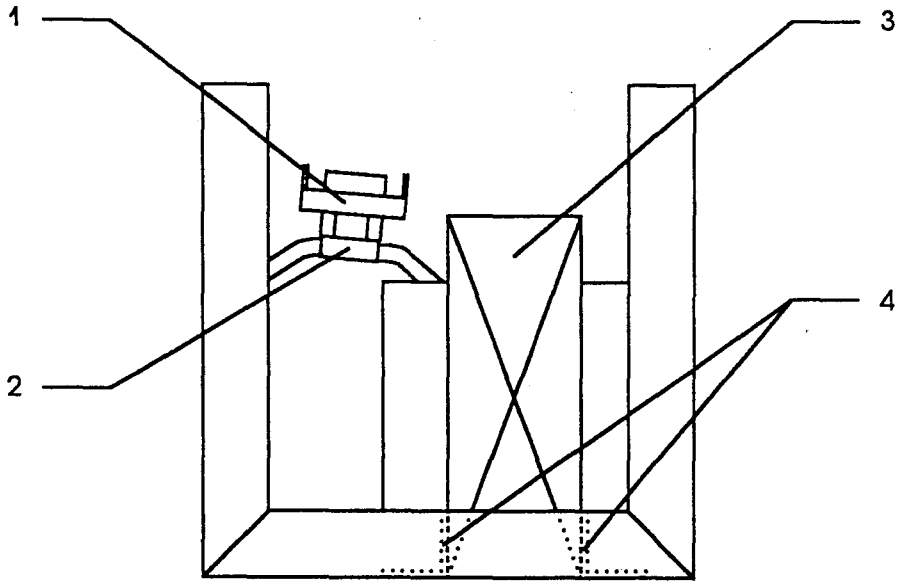


FIGURE B - RIGHT SIDE VIEW & INTERNAL COMPONENTS

ITEM NO.	DIA. MKGS.	PART NO.	DESCRIPTION	QTY.
1	TP1	HG-428	THERMAL SWITCH	1
2		HG-427	BRACKET, THERMAL SWITCH	1
3	T1	IB-108	TRANSFORMER, POWER (INCLUDES BRACKETS)	1
4		IB-304	BRACKET, TRANSFORMER	2